



Healthy Air Purifier 55

Effective against multiple pollutants
Wall mounted•Free standing

Product maintenance

Common problems	Possible cause	Trouble shooting
The unit is not working	Not properly connected to power supply	Ensure power cord is plugged in fully and that the power supply is on
	Not switched on	Press "on/off" button
Unit not improving air quality	Filter has reached the end of its service life	Replace filter. Typically, after 9-18 months depending on duty cycle and local air quality
Unit not generating air movement	Air inlet or outlet blocked	Ensure all packaging has been removed during initial set-up Ensure unit is installed in an area where air can flow into and out of the unit. Remove foreign parts from the inlet and outlet
	Room is too big	Check room volume that the unit clearing. Install sufficient purifiers for the air volume to be cleaned
	Filter fitted back to front	Check filter installation and correct as necessary
	Filter surface contaminated with dust and dirt	Replace filter
Unit is unusually noisy during operation	Air inlet or outlet blocked	Ensure all packaging has been removed during initial set-up Ensure unit is installed in an area where air can flow into and out of the unit. Remove foreign parts from the inlet and outlet
	Normal start up	During start up of the ion function a "fizzing" sound is normal.
	Fan or fan motor failing	Contact installer

If above corrective actions are not able to solve the problem, please contact sales and after-sales service assigned by our company. For safety, please do not disassemble the unit and maintain by yourself to avoid damage.

- Do not plug in or unplug the unit with wet hands to avoid the risk of electrocution. Always unplug the unit before moving it.
- Do not use the unit in very damp areas such as bathrooms, to avoid the risk of an electrical shock or short circuit.
- The unit is not designed to filter smoke and fumes from burning. The device should not be used in kitchens or near naked flames.
- This unit contains a high voltage negative ion module, please do not disassemble, or attempt repairs if you are not an authorised technician. If necessary, contact your supplier for details of our authorised service network or returns policy.
- Do not cover or interfere with the inlet or outlet areas of the unit.
- In case of any physical damage to the unit or if the unit gives off any abnormal noise, peculiar smell, smoke please turn off the unit immediately and contact the seller. Do not attempt to disassemble the unit.
- If the supplied plug doesn't match your sockets please contact the seller for an alternative unit, please do not attempt to change the plug yourself. When the unit is not in use for long periods of time it is recommended to turn the unit off and unplug it from the power supply.
- Where replacement parts are required it is recommended to use only Healthy Air branded replacement parts and filters.
- This product is not able to eliminate carbon monoxide or Radon gas, it is not protection against disaster, and it does not provide air ventilation.
- The front control panel is for user interface it is not the power switch. Use the on/off switch and unplug the unit before opening it to replace the filter.

PAGE 5

Warranty card

Dear customer,

Thank you for choosing a Healthy Air product. To protect your consumer rights and customer interests please fill in the warrantee card and keep it in a safe place with your purchase receipt.

Our product warrantee includes:

1. We are responsible for any repairs for any fault within one year of the date of purchase, as a result of any quality issues with our product. You may be asked to prove date of purchase and the warrantee card in the unlikely event of a fault.
2. The following are not covered by this warranty:
 - a. Damage by 3rd party (such as drops, impacts, use in a highly corrosive atmosphere etc)
 - b. Damage by external events, for example earthquake, fire, flood, and natural disasters etc.
 - c. Damage during attempted repair by an unauthorised technician.
 - d. Damage caused by incorrect installation or operation, as described in this handbook.
 - e. Failure occurring after the warranty period.
 - f. In the event of such damage any repairs may be at the users cost
3. If returning the product to your retailer ensure no physical damage has occurred, return the unit and any accessories, and ensure to meet the other returns policies of the retailer.

Please fill in the following information and keep it in a safe place

Product name : _____ Model : _____ Product code: _____

Username : _____ Telephone : _____

customer address : _____

Place for Purchase : _____ Date for Purchase : _____

Product warranty records:

NO.	Failure cause	Service man	Date	Maintenance results	Sign


Notes: The warranty card cannot be altered or reissued. Please keep it in a safe place.

PAGE 6

Healthy Air Purifier 55


Effective against multiple pollutants
Wall mounted•Free standing

User Manual

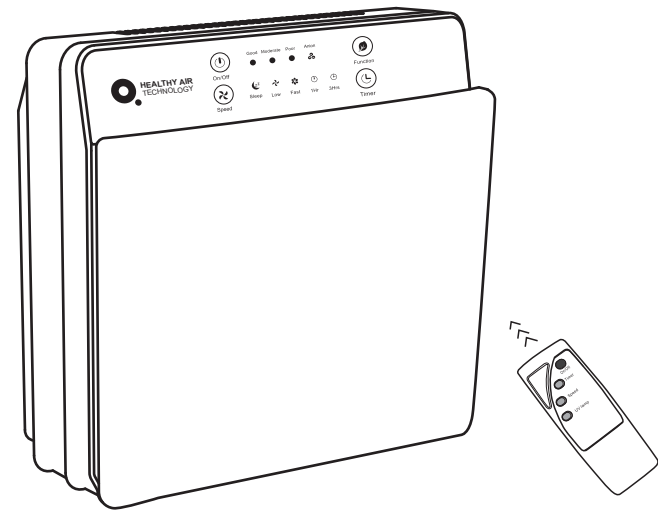

- Recommended coverage 10-15m² per unit
- Contains multi-layer filter and catalyst system
- Contains anti-microbial filter
- High efficiency HEPA H13 filter
- Honeycomb DNO catalyst filter
- Automatic air quality monitoring and adjustment
- Negative ioniser technology
- High accuracy TVOC sensor
- Filter replacement indicator
- Wireless remote control

- This product was designed and developed by a profession technology team to be used in a domestic environment and other similar indoor spaces. It is designed to purify indoor air and remove harmful indoor gases (e.g. formaldehyde), second hand smoke, airborne particulates (e.g. PM 2.5).

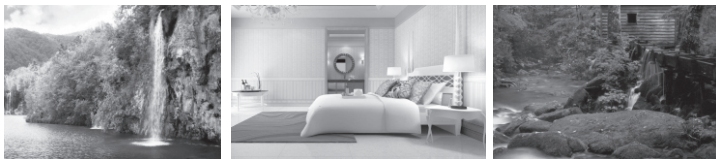

Where to use this product

- This product is suitable for domestic residencies and similar environments. It should not be used outdoors.
- Avoid use where the unit might be exposed to high temperatures, high humidity, excessive dust levels and corrosive, flammable, and combustible gases.
- Do not use the device close to heating equipment such as ovens, fan heaters or radiators or in direct sunlight.
- Do not spray liquids directly into the unit.
- While in use the unit should be on a flat and dry surface.
- While in use ensure the inlet and outlet areas have 30cm of clear space to enable good air flow.
- For the electrical power requirements please refer to the table at the end of the handbook. This is not a toy, do not let children play with it and treat it with care.


Specification

Product name	Healthy Air Purifier	Model	HA55/Wall Mounted
Rated voltage	220V~	Rated power/Noise	8.5W/54dB(A)
Frequency	50Hz	Net weight of product	2.5kg
Clean air quantity (PM)	55 m ³ /h	Product size	334*129*295 (mm)

All the specification of above table is measured data, due to different service environment, there may be some changes, please note. If the product is technically updated, please be subject to the new instructions, no further notification will be published.

PAGE 1

Operation method

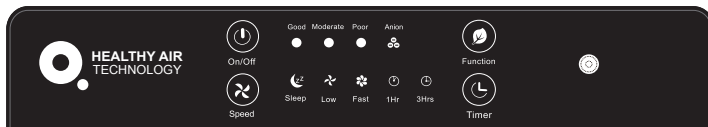

- Starting up: Once connected to the power supply the unit can be turned on and off by a simple touch of the "on/off" button.
- Fan speed: This device has three settings, sleep mode, standard mode and fast speed. These modes are expected to be used broadly as follows: use "fast speed" where there is obvious air pollution or odours and "sleep mode" for overnight and for other times use "standard mode".
- Timing: There are two options for auto-shutdown, either 1 hour or 3 hours.
- Anion: The unit will automatically enable this function unless disabled on the control panel. The function will emit negative ions for 20 minutes and then stops for 5 minutes to reset the function and then repeat ion emissions.
- Automatic air quality detection: The device is equipped with a built in TVOC sensor. This sensor takes 3 minutes to establish a diagnostic reading following powering-up of the unit. Once the sensor has established the diagnostic level it will automatically adjust the fan speed to "fast speed" during periods where it detects high levels of pollutants. When the unit is running in "fast speed" because of detected pollutants it cannot be moved to a slower speed.
- Filter replacement warning: When the filter has achieved 1,500 operational hours the unit will flash the three green lights and sound an audible warning. Once the filter has been replaced press and hold both the "timing" and "air speed" buttons for 5 seconds to reset the alarm.
- Remote control: The unit is supplied with an infra-red remote controller with an effective range of 4-5 meters.

PREPERATIONS BEFORE USE


Please remove the packaging, protective films on the unit and the plastic bag around the filter before use.

BEFORE USE

Please place the device on a flat and dry surface with at least 30cm of clear air around the inlet and outlet areas. Before plugging into the power make sure that the power sockets satisfy the requirements of this product.

PAGE 2

Product Breakdown Drawing

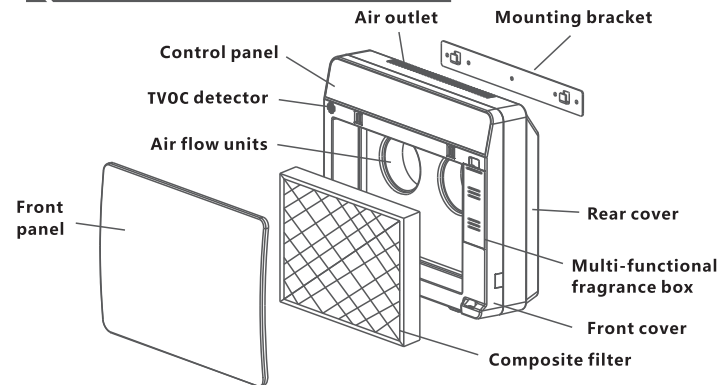

Multi-functional fragrance box

The device is fitted with a multi-functional fragrance box. This enables the user to add different fragrance capsules in order to add a fragrance to the room.

CHANGING THE FILTER


Before changing the filter turn off the power and unplug the unit from the mains power supply. Tip: It may help with stability to lean the product against a wall during filter removal for added stability.



Removing the front panel/filter unit

Hold the top of the unit with your left hand, hold the top edge of the front panel with your right hand. Pull the front panel out and down to approximately 45° angle, then lift off the panel. Hold the two tabs on the filter block and gentle pull away from the unit.

PAGE 3

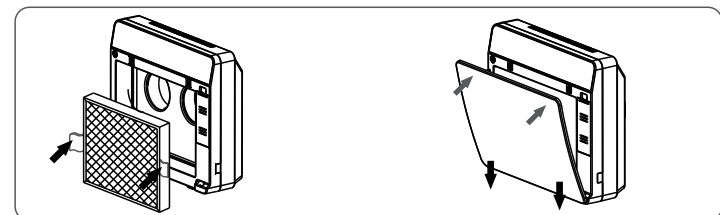

Assemble the filter/ Assemble the front panel

Align the filter to the slot, the side with braces outward, then push into the unit slightly. / Insert the bottom buckle to the holes in the front cover, then assemble the front panel into the cover slightly.

- Remember that the lifetime of the filter varies depending on daily run times and local pollution levels.
- Healthy Air filters are both filters and contain advanced and patented nano-catalyst layers. We strongly recommend only using approved Healthy Air replacement filters for optimal performance and air quality.
- Please ensure the unit is unplugged before changing the filter.
- The exterior anti-microbial filter should be brushed clean with a soft brush every two weeks to clear away large airborne pollutants such as hair and dust.

WARNING

Do not wash with water or soak the filter in water.

	Filtration system	Function
1	Primary anti-microbial filter	Filter large particle or hair
2	High efficiency HEPA H13 filter	PM2.5, sources of allergy, powder, bacteria
3	Honeycomb DNO catalyst filter	Destroy odour, harmful gases, fomaldehyde, benzene, ammonia gas, Nox, Sox, TVOC, sulfuretted hydrogen. Kill bacteria and viruses.
4	Negative ioniser	Eliminate dust, fresh up the air, remove indoor static electricity for sterilization

Healthy Air patented DNO technology can kill virus and bacteria effectively. Only in a very limited number of markets this unit is also supplied with a UV light. Please note that all units are supplied with a standard remote control, including UV light on/off button. The UV light is an optional extra and most units do not have the light fitted even if the remote control has the button. We are sorry for any confusion that this may cause.

PAGE 4